

Installation Instructions for Peterbilt Shifter Floor Cover Plate—RW238-1-PETE / RW238-1BP-PETE

BEFORE INSTALLATION

Inspection: Before installation, inspect all parts for shipping damage. If any of the parts appear damaged or questionable, DO NOT INSTALL! Contact your dealer or our facility for a replacement part or assistance. Once a product is installed, it cannot be returned because of shipping damage.

Important: Read and understand all installation instructions prior to installation. If any part of the instruction seems unclear, contact our office for assistance. (Monday – Friday 8am to 4:30pm CST at 800-982-1180 or 847-662-7722)

TOOLS NEEDED:

Philips Head Screwdriver

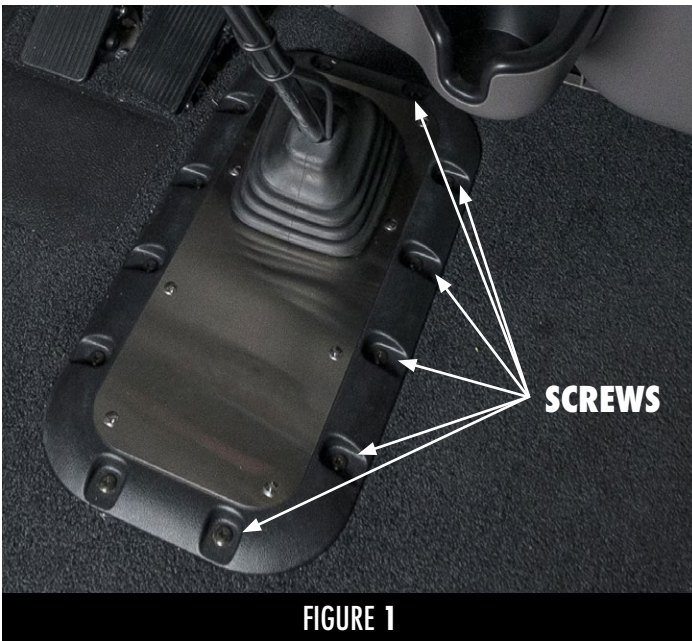


FIGURE 1

STEP 1: REMOVE THE EXISTING FLOOR COVER

Remove the screws in the existing Floor Cover. **IMPORTANT!** Be sure to save the 12 screws to be reused when installing the new floor cover plate.

**STEP 2:
PLACE SCREWS IN THE
NEW FLOOR COVER**

One at a time slide the saved screws into the holes on the top side of the floor cover plate (See Fig. 2A). Slide the nylon spacer provided over the screw under the bottom of the plate, then slide the O-ring over the screw to hold the spacer in place when installing the floor cover plate (2B).



FIGURE 2A

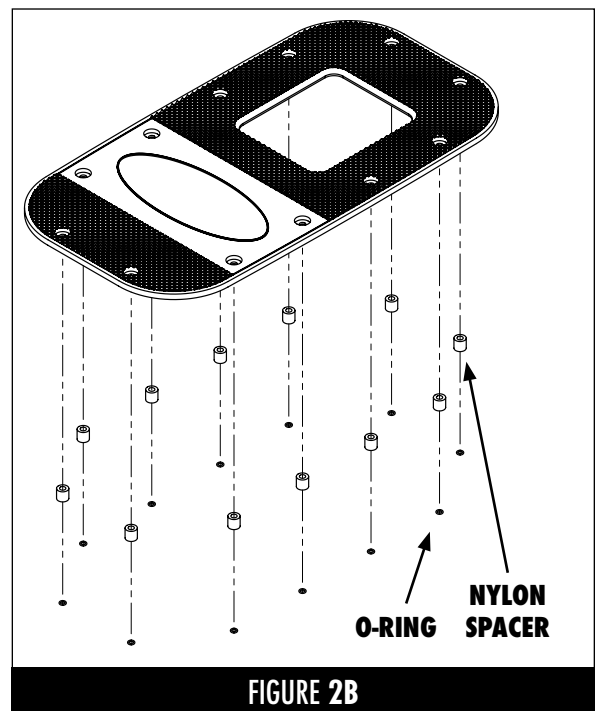


FIGURE 2B

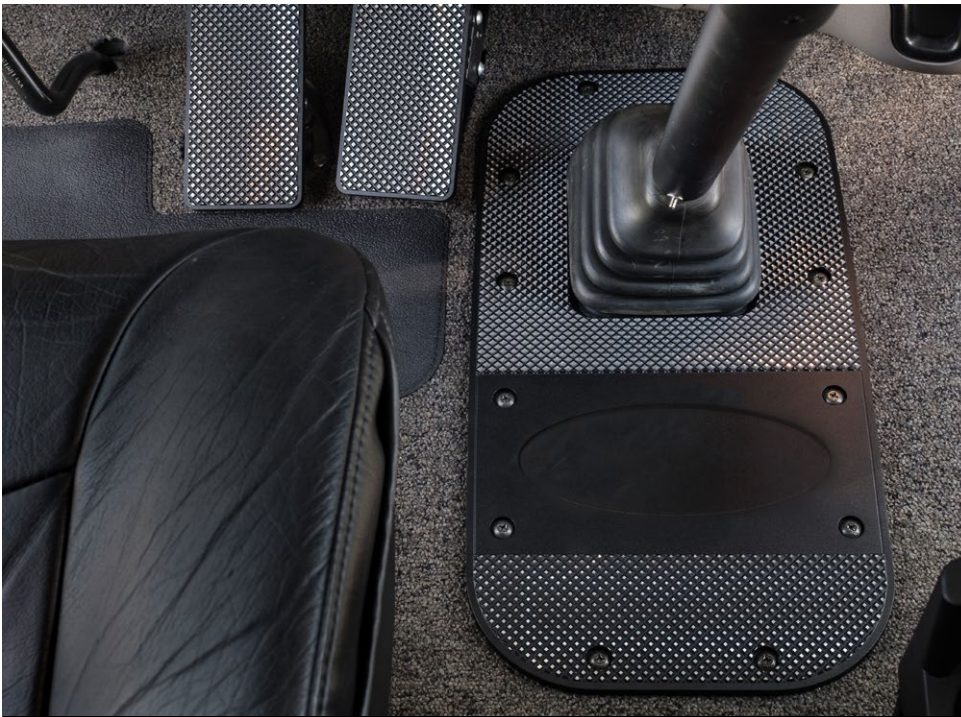


FIGURE 3

**STEP 3:
SECURE SHIFTER COVER
PLATE TO THE FLOOR**

Position the floor cover plate over the holes where the old floor cover was and tighten the 12 screws evenly.

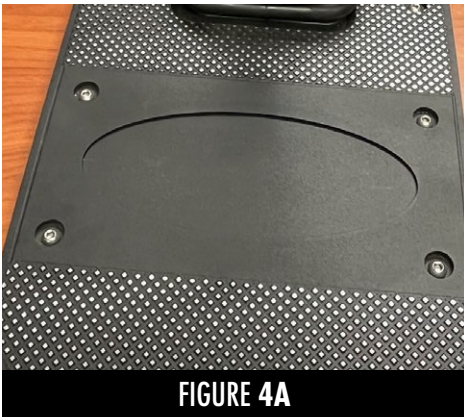


FIGURE 4A

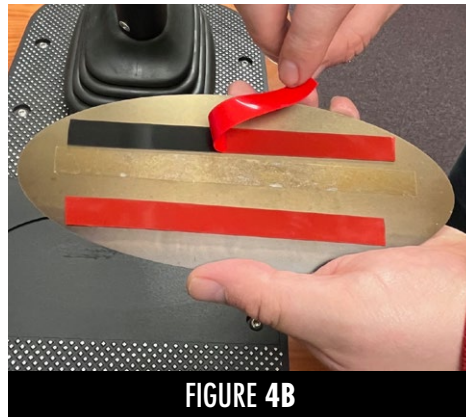


FIGURE 4B

**STEP 4:
INSERT RWC EMBLEM
PLATE INTO THE SHIFTER
FLOOR COVER PLATE**

Make sure the floor cover plate is clean (See Fig. 4A). Peel off the backing of the double sided tape on the back of the emblem plate (4B). Attach the emblem plate to the floor cover plate (4C). The shifter floor cover plate is now installed (4D).

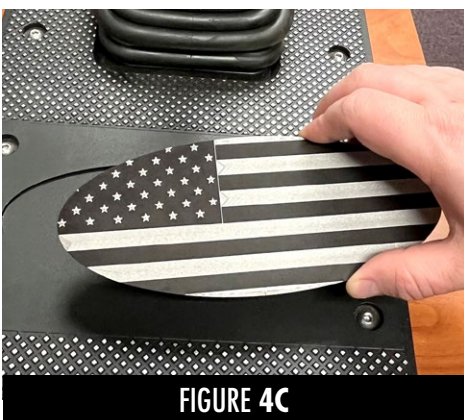


FIGURE 4C

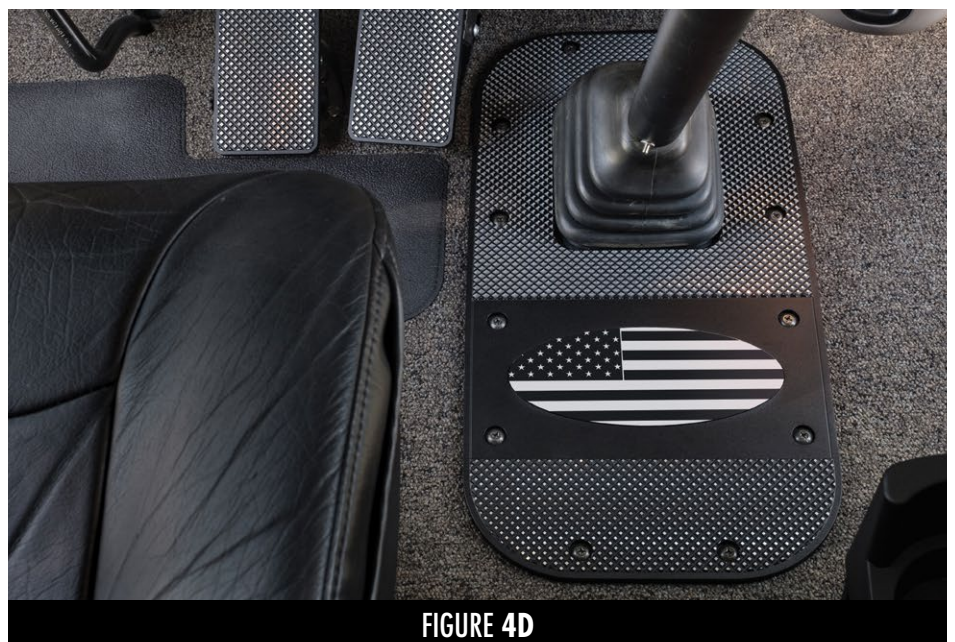


FIGURE 4D