

INSTRUCTIONS FOR STAINLESS STEEL CHEVY/GMC ACCESSORIES

TOOLS NEEDED

Screwdriver

VERY IMPORTANT:

Read And Understand These Steps Before Installation!

Grille Covers (RWG6000C & RWG600D)

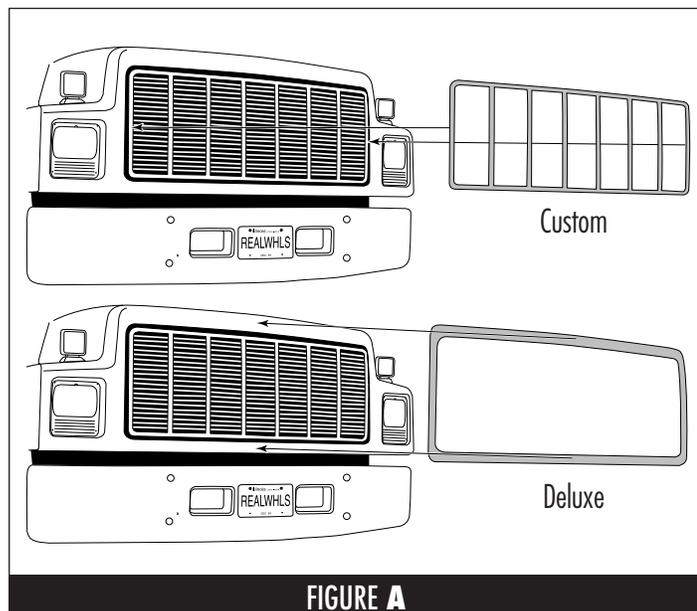


FIGURE A

Step 1.

Before you begin make sure the area around the grille is dry, clean, free of dirt and loose paint.

Step 2.

Before removing any tape place custom or deluxe cover over grille area to verify how it will fit.

Step 3.

Peel off all the paper from the double sided tape on the back of the custom or deluxe cover, carefully place cover on grille. **Note:** This tape is very strong, once it is pushed on it's very difficult to remove without ruining the part. Continue to push the cover onto grille until the entire cover is on and in place. Push and hold pressure for 30 seconds to 1 minute over taped areas.

Step 4.

Remove the plastic coating and your finished.

Important Note: This two way tape continues to bond for 24 hours. Try to keep the vehicle dry for that time period.

Grille Covers (RWG6200C & RWG6200D)

Custom RWG6200C Kit Includes: 12 Flat Pieces and 6 Slat Cover Pieces

Deluxe RWG6200D Kit Includes: 12 Flat Pieces, 6 Slat Cover Pieces and Top & Bottom Strips

Step 1.

Before you begin make sure the area around the grille is dry, clean, free of dirt and loose paint.

Step 2.

Before removing any tape place custom or deluxe cover over grille area to verify how it will fit (See Figure B).

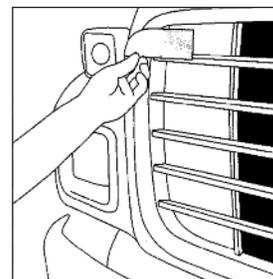


FIGURE B

Step 3.

Peel off all the paper from the double sided tape on the back of the custom or deluxe cover and carefully place cover on grille (See Figure C). **Note:** This tape is very strong, once it is pushed on it's very difficult to remove without ruining the part. Continue to push the cover onto grille until the entire cover is on and in place. Push and hold pressure for 30 seconds to 1 minute over taped areas. Repeat for other side.

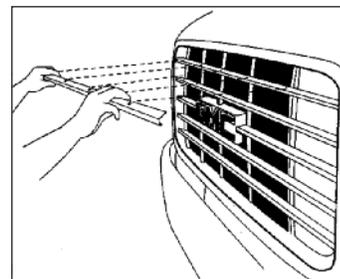


FIGURE C

Step 4.

Remove the plastic coating and your finished (See Figure D).

Important Note: This two way tape continues to bond for 24 hours. Try to keep the vehicle dry for that time period.

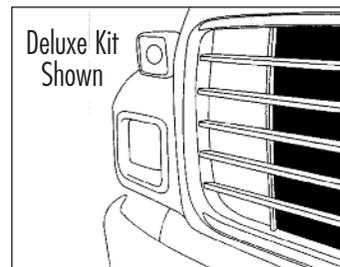


FIGURE D

Head Light Visor (RW6101HLV)

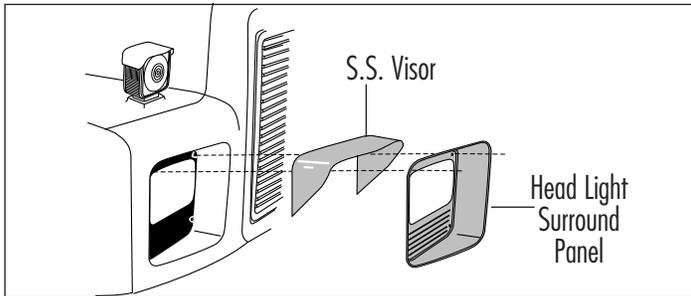


FIGURE E

Step 1.

Remove head light surround panel. Place Stainless Steel Visor into panel area and place panel back over visor (See Figure E).

Head Light Visor (RW6201HLV)

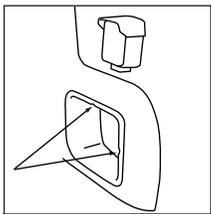


FIGURE F

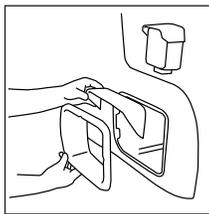


FIGURE G

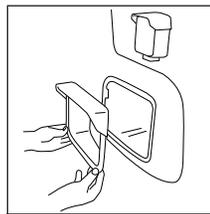


FIGURE H

Step 1.

Using the proper size screwdriver, remove the two screws from both sides of the head light bezel (See Figure F).

Step 2.

Next slide the S.S. Head Light Visor down over the top of the head light bezel. Make sure the S.S. Head Light Visor tabs are lined up around the flange of the light bezel (See Figure G).

Step 3.

Then place the light bezel with the S.S. Visor on it, back into the head light socket. Make sure S.S. Visor stays hooked behind the two sides of the light bezel, and hooks into the top portion of the head light socket when you place the head light bezel back onto the light socket (See Figure H).

Step 4.

Then replace the two screws and peel off plastic coating and you are done.