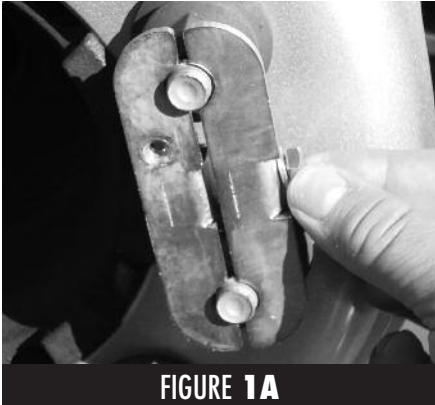
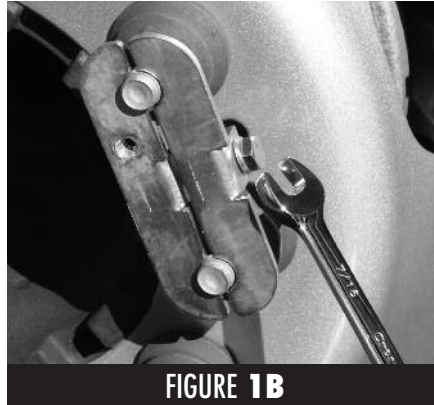


**INSTALLATION OF FRONT COVER-UP HUB COVERS—RW1091****VERY IMPORTANT! Read And Understand These Steps Before Installation.****FIGURE 1A****FIGURE 1B****FIGURE 2A****FIGURE 2B****FIGURE 2C****STEP 1 Installing Mounting Brackets**

- Loosen the bolt on the side of the Wedge Lock Bracket. The Wedge Bracket will slide on top of the lug nuts (See Fig. 1A).
- Push and hold against the bracket making sure it is firmly on top of the wheel lug nuts. Then hand tighten the bolt to bring the two halves of the bracket closer together, and wedging itself into the excess thread of the studs. Next with a 7/16" wrench (or ratchet wrench) begin tightening the bolt. (See Fig. 1B) Make sure the bracket is flat across the face and wedging into the threads of the wheel studs, tightening the bolt until the wedge lock bracket is securely tight. **Repeat procedure for other side directly opposite.**

**STEP 2 Installing Cover-Up Hub Cover**

- Align cover holes with holes in the bracket. (See Fig. 2A & 2B)
- Then using provided S.S. screws, put through the Hub Cover and into the holes of the mounting brackets and hand tighten. (See Fig. 2C) Finish tightening with a Phillips screw driver.
- Repeat the same process on the other wheel and you're finished.

**REAR MOUNTING ON BACKSIDE.**

## INSTALLATION OF REAR COVER-UP HUB COVERS—RW1092

**VERY IMPORTANT!** Read And Understand These Steps Before Installation.



FIGURE 1A



FIGURE 1B



FIGURE 1C

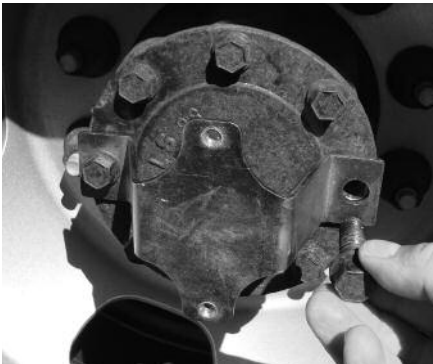


FIGURE 1D



FIGURE 1E

### STEP 1 Installing Mounting Brackets

- Remove two bolts on the hub directly across from each other. (See Fig. 1A & 1B)
- Next place the brackets onto the hub aligning the holes. Using the two bolts that were removed, reinstall. (See Fig. 1C, 1D & 1E)



FIGURE 2A

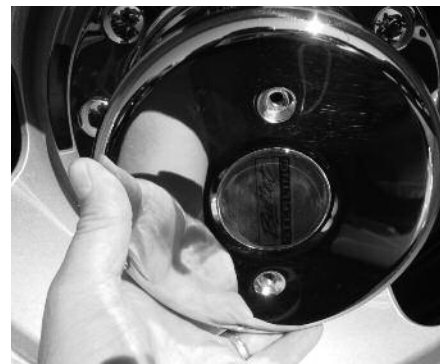


FIGURE 2B



FIGURE 2C

### ▲ STEP 2 Mounting The Hub Cover

- Align cover holes with holes in the bracket. (See Fig. 2A & 2B)
- Then using provided S.S. screws, put through the Hub Cover and into the holes of the mounting brackets and hand tighten. (See Fig. 2C) Finish tightening with a Phillips screw driver.
- Repeat the same process on the other wheel as you're finished. (See Fig. 2D)

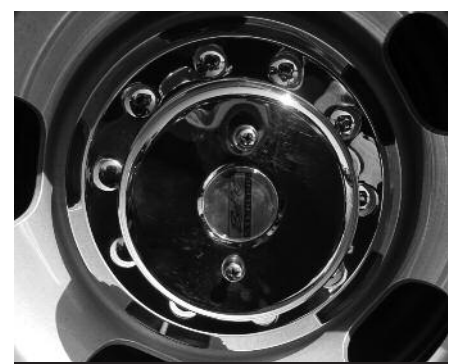


FIGURE 2D

**RealWheels Corporation.** • 3940 Tannahill Drive • Gurnee, IL 60031

847-662-7722 • Fax 847-662-7744 • [www.realwheels.com](http://www.realwheels.com) • [info@realwheels.com](mailto:info@realwheels.com) • toll-free 1-800-982-1180