



**Instructions For RW8160V European Front Axle Covers**


**VERY IMPORTANT!**

**Read And Understand These Steps Before Installation.**

**TOOLS NEEDED**

**Rubber Mallet**

Hub Locators

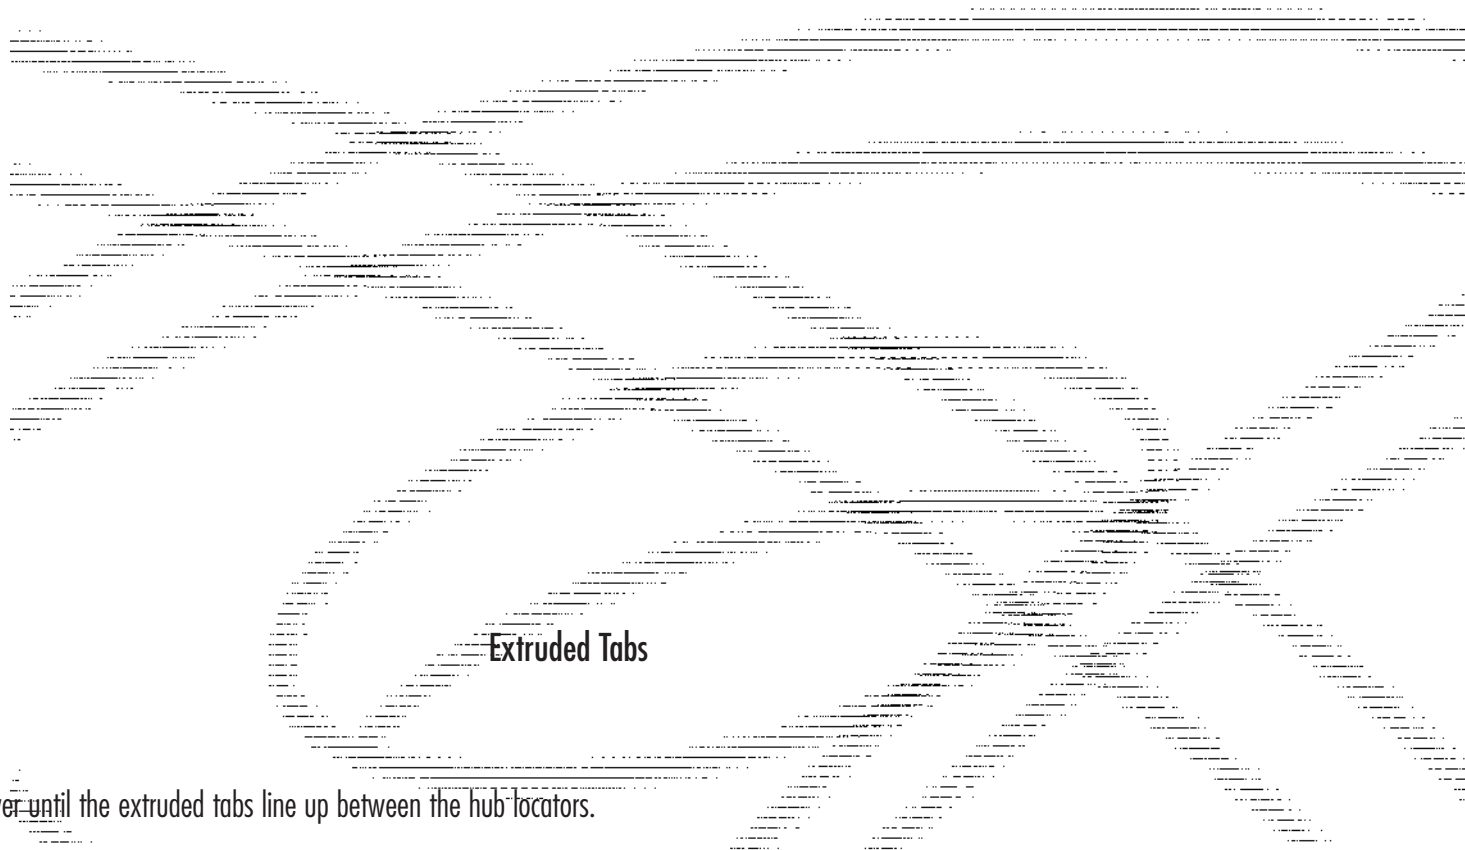

Extruded Tabs

**Step 1.**

Rotate axle cover until the extruded tabs line up between the hub locators.

**Step 2.**

Push one side in, then with your fist or rubber mallet pound the other side in towards the outer edge of the axle cover.