

**IMPORTANT: Read And Understand All Instructions Before Installation • QUESTIONS? CALL 1-800-982-1180**

## BILLET FUEL DOOR

**Time To Install: Approx. 10 Minutes**

Tool Needed: 1/4" Nut Driver



**PHOTO 1**

**1. Extremely Important: Clean the area where the Fuel Door is to be installed.** If the area where the Fuel Door is to be installed is not clean, dry, and free of any vinyl dressing, the Fuel Door will not stick in place. Begin by cleaning the area thoroughly with a good non-residue cleaner such as Windex, or just clean thoroughly with soap and water and dry completely.



**PHOTO 2A**

**2. Open the fuel door slightly and peel the 3M tape backing (See Photo 2A). Align over the fuel bucket (See Photo 2B). Make sure that the fuel door is level and centered correctly, then push firmly against the body of the vehicle (See Photo 2C).**




**PHOTO 2B**



**PHOTO 2C**



**PHOTO 3A**

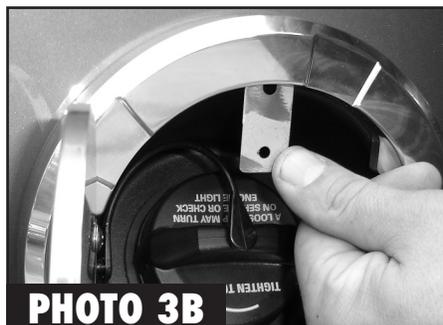

**PHOTO 3B**



**PHOTO 3C**

**3. Now press the bottom and top tabs firmly against the fuel bucket (See Photos 3A, 3B & 3C).**



**PHOTO 4A**



**PHOTO 4B**



**PHOTO 4C**

**4. Take the supplied self tapping screws and insert them through the fuel door brackets into the fuel bucket using a 1/4" nut driver (See Photos 4A & 4B). You are now finished (See Photo 4C).**

**RealWheels Corporation • 3940 Tannahill Drive • Gurnee, IL 60031**

**847-662-7722 • Fax 847-662-7744 • www.realwheels.com • info@realwheels.com • toll-free 1-800-982-1180**