

INSTALLATION OF REALWHEELS® RWG7101-TRHV15 VENT OVERLAY FOR 2015+ FORD TRANSIT

VERY IMPORTANT!—Read And Understand These Steps Before Installation.



PHOTO 1

STEP 1 — Cleaning The Vent

Begin by cleaning the black plastic vents thoroughly with soap and water or Windex and a clean cloth. (See Photo 1) **Note:** The Stainless Vent Overlays may have a white PVC protective coating covering them. This protective film can remain on during installation and then removed after the overlays are installed.

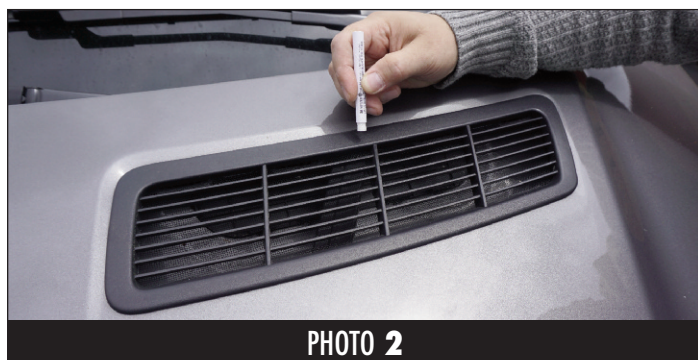


PHOTO 2

STEP 2 — Priming The Vent

After the black plastic overlays are clean and dry, take one of the provided 3M Primer Sticks and squeeze the primer stick to get the primer flowing onto the brush end. Then prime the flat areas where the stainless steel vent overlays will be placed. (See Photo 2) **Note:** Let the primer dry for 5 minutes before installing the stainless overlays. Do not touch the primed areas after they have been primed.

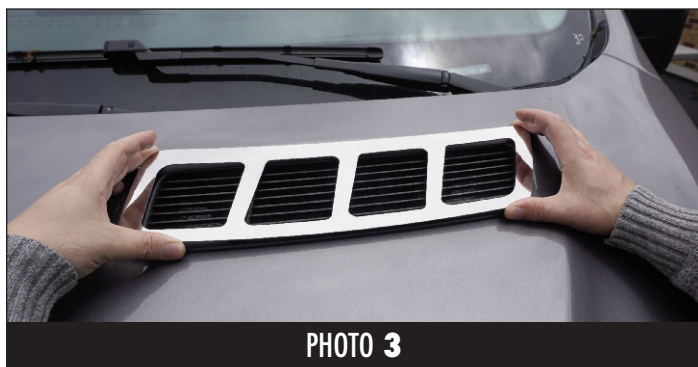


PHOTO 3

STEP 3 — Test Fit

Important: Before removing any heavy duty 3M Tape backing from the trim accessories, loosely place them in position on the vent to verify how they will fit. Make sure the parts line up and fit side-to-side and top-to-bottom. (See Photo 3)



PHOTO 4

STEP 4 — Removing Backing From Double-sided Tape

Carefully remove the backing from the double-sided tape from one of the overlays. (See Photo 4)



PHOTO 5

STEP 5 — Installing The Vent Overlay

Carefully place the vent overlay in position. Push and hold firmly for a few seconds. (See Photo 5) Repeat for other piece.



PHOTO 6

STEP 6 — Remove White PVC Protective Coating

If needed, remove all the white PVC protective coating from all the Stainless Steel overlays. Any PVC residue can easily be removed with isopropyl alcohol and a soft cloth. You are now finished. (See Photo 6)