




Installation of Billet Aluminum Steering Wheel Spinner Clamp

VERY IMPORTANT!

Read And Understand These Steps Before Installation.

TOOLS NEEDED

- 1/4" and 3/16" Allen Wrenches

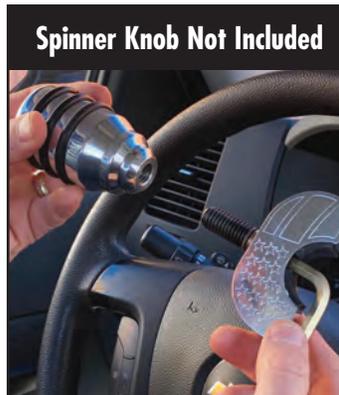

Step 1. Using a 3/16" Allen Wrench remove the two bolts from the bottom clamp and separate the two halves.

Step 2. Insert a 1/4" Allen Wrench through back of the Top Clamp and into the base of the 1/2" x 13 threaded stud.

Step 3. Using the Allen Wrench to keep the threaded stud from moving, thread on the Spinner Knob (not included)

Step 4. Firmly hold the Allen Wrench and continue to thread on the Spinner Knob until it bottoms out and is secure.



Step 5. Place the Top Clamp with Spinner Knob on the steering wheel in the desired location.

Step 6. Position the bottom clamp on the back of steering wheel and align the two holes in the bottom clamp with the two holes in top clamp. Hand thread the two bolts through the bottom clamp and into the top clamp.

Step 7. Using a 3/16" Allen Wrench alternate tightening the two bolts until the Clamp is secure or until the Top and Bottom Clamp meet.

Step 8. You are now finished.