

INSTALLATION OF REALWHEELS® GRILLE AND VENT OVERLAY FOR 2011 TO 2015 FORD F350/F450/F550

VERY IMPORTANT!—Read And Understand These Steps Before Installation.

2011 - 2015 Ford F350/F450/F550

Model: RWG7001-BV15 2011

- Bumper Overlay 2 piece set

Model: RWG7000-C15

- Custom Grille Overlay 4 piece set

Model: RWG7000-D15

- Deluxe Grille Overlay with RWG7001-BV15



PHOTO 1

STEP 1 — Cleaning The Grille

Begin by cleaning the black plastic grille thoroughly with soap and water or Windex and a clean cloth. (See Photo 1) **Note:** The Stainless Steel Grille pieces may have a white PVC protective coating covering them. This protective film can remain on during installation and then removed after all overlays are installed.

STEP 2 — Priming The Grille and/or Vents

After the black plastic grille is clean and dry, take one of the provided 3M Primer Sticks and squeeze the primer stick to get the primer flowing onto the brush end. Then prime all the flat areas where the stainless steel grille overlay will be placed. (See Photo 2) **Note:** Let the primer dry for 5 minutes before installing the stainless overlays. Do not touch the primed areas after they have been primed.

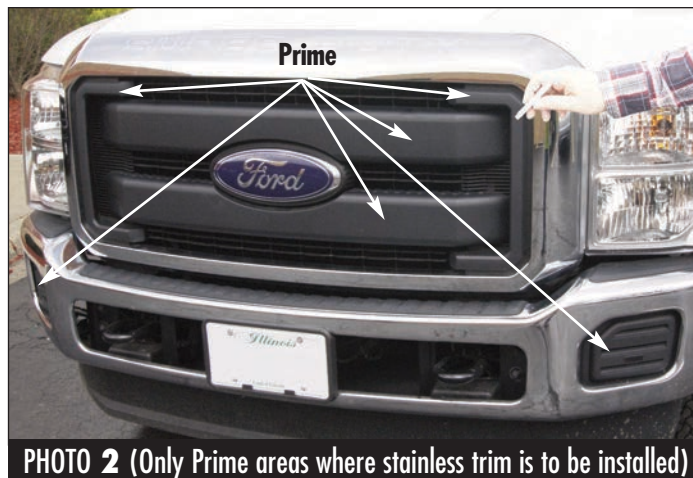


PHOTO 2 (Only Prime areas where stainless trim is to be installed)

STEP 3 — Test Fit

Important: Before removing any heavy duty 3M Tape backing from the trim accessories, loosely place them in position on the grille and vents to verify how they will fit. Make sure the parts line up and fit side-to-side and top-to-bottom.

STEP 4 — Removing Backing From Double-sided Tape

Carefully remove the backing from the double-sided tape on. Carefully place the top grille overlay in position. Push and hold firmly for a few seconds. Repeat for other pieces.

STEP 5 — Remove White PVC Protective Coating

If needed, remove all the white PVC protective coating from all the Stainless Steel grille and vent overlays. Any PVC residue can easily be removed with isopropyl alcohol and a soft cloth. You are now finished.