

Installation of Front Cover-up Hub Covers for Stud Piloted Wheels • Model RW1013-012SK • Bracket RW012SFK

VERY IMPORTANT!


Read And Understand These Steps Before Installation.

- Front Set Kit Model Number: RW1013-012SK
- Bracket Model Number: RW012SFK (Includes 2 brackets)
- Over-the-Lug Mounting for stud piloted wheels
- Patented

TOOLS NEEDED


1/2" Open End Wrench, Phillips Screwdriver

NOTE: Your wheels must have a minimum of 1/4" of excess stud sticking out past the wheel lug nuts. RealWheels recommends a minimum of 1/4" of excess stud sticking out past the wheel lug nuts. (See Fig. A1) When installing the bracket on wheel lug nuts with a minimum excess stud, bracket must engage completely into the stud threads. (See Figs. A2 & A3)

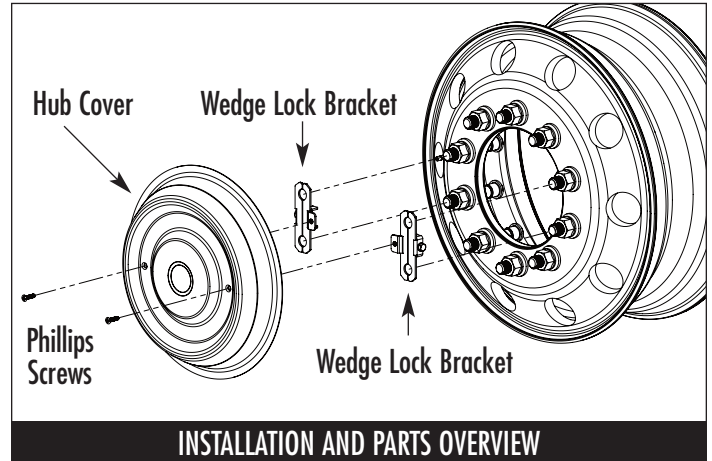

Step 1. Placing Bracket Onto Wheel Studs

Loosen the 5/16" bolt on the side of the Wedge Lock Bracket enough so it will slide onto two of the wheel studs. (See Fig. B1) Then place the Wedge Lock Bracket with front side of bracket facing out onto two of the wheel studs until it rests on top of the wheel lug nuts. (See Fig. B2) Push and hold against the bracket making sure it is firmly on top of the wheel lug nuts. Then hand tighten the 5/16" bolt to bring the two halves of the bracket closer together, and wedging itself into the excess thread of the studs. (See Fig. B3) **NOTE:** One side of the bracket may raise up a little depending what thread of the stud it wedges into, this is normal.

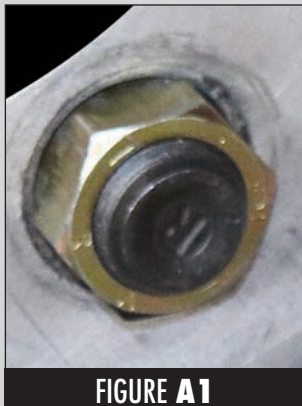

Continued on back...

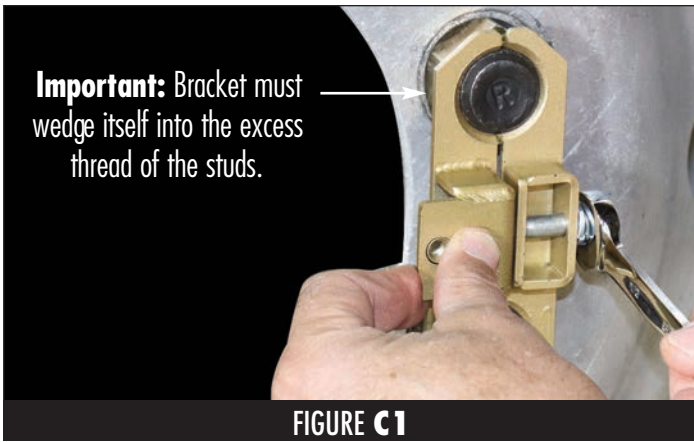


FIGURE C1

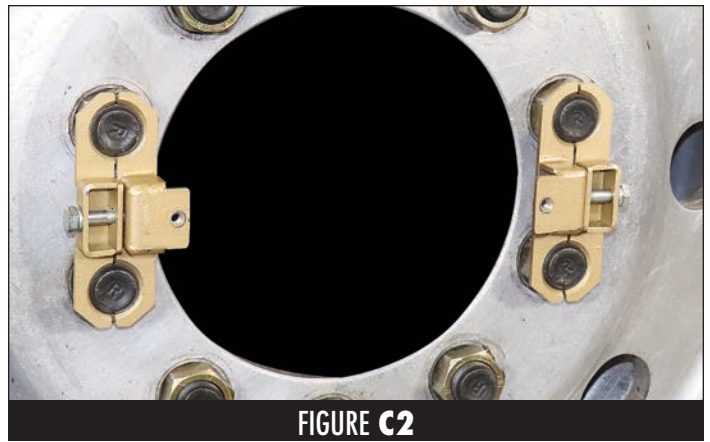


FIGURE C2

Step 2. Tightening Bracket Onto Wheel Studs

Next with a 1/2" open end wrench begin tightening the 5/16" bolt. (See Fig. C1) Make sure the bracket is flat across the face and wedging into the threads of the wheel studs, continue tightening until the wedge lock bracket is securely tight.

Repeat Steps 1 and 2 for second bracket exactly opposite of first bracket. (See Fig. C2)

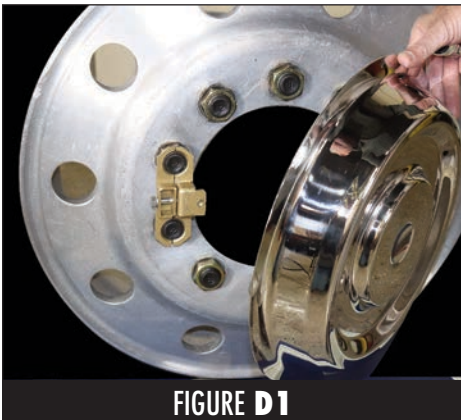


FIGURE D1

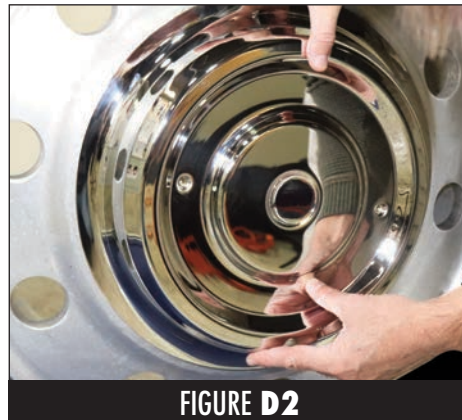


FIGURE D2



FIGURE D3



FIGURE D4



FIGURE D5



FIGURE D6

Step 3. Installing The Hub Covers

Align the hub cover with the two threaded nuts of each bracket. (See Figs. D1 & D2) Then place the phillips head screws into the holes of the hub cover, and alternate tightening them into the threads of the brackets until the hub cover is securely tight to the wheel. (See Figs. D3, D4 & D5). Repeat steps for the other wheel and you are finished (See Fig. D6).

IMPORTANT: We recommend that the hub covers are checked and inspected periodically to make sure that they are tight and secure to the wheels. If necessary retighten the mounting bolts and screws.

Reverse Steps For Removal

RealWheels Corporation • 3940 Tannahill Drive • Gurnee, IL 60031

847-662-7722 • Fax 847-662-7744 • www.realwheels.com • info@realwheels.com • toll-free 1-800-982-1180