

IMPORTANT: Read And Understand All Instructions Before Installation • QUESTIONS? CALL 1-800-982-1180

BILLET FOG LIGHT & MARKER LIGHT SURROUNDS

Time To Install: Approx. 15 Minutes



PHOTO 1

1. Extremely Important: Clean the area where the Fog Light Surrounds are to be installed. If the area where the trim accessory is to be installed is not clean, dry, and free of any vinyl dressing, the trim accessory piece will not stick in place. Begin by cleaning the area thoroughly with a good non-residue cleaner such as Windex, or just clean thoroughly with soap and water and dry completely. **Note: Do not** use the 3M Tape Primer as a cleaner.

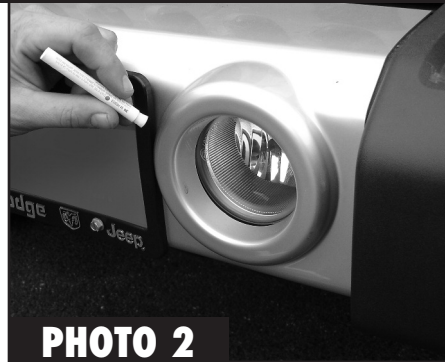


PHOTO 2

2. Important: Prime only the plastic area where the Fog Light Surrounds are to be installed. After the areas are completely cleaned and dry, you must then coat these plastic areas with 3M Tape Primer 94 (included). Thoroughly coat the cleaned area where the trim is to be installed with the Primer 94 and wait 5 minutes before installing the Trim Piece.



PHOTO 3

3. Position and Adhere the Fog Light Surrounds. Before removing any heavy duty 3M Tape backing from the Trim Piece, loosely place it in position to verify how it will fit. Make sure the part lines up with any openings and fits side-to-side and top-to-bottom. Next peel off all the paper from the double-sided tape on the back of the Trim Piece. Carefully place the Trim Piece in position. **Important:** Make sure slats are in the vertical or horizontal position. Push and hold firmly for a few seconds. Repeat for the other side.



PHOTO 1

Extremely Important: Clean the area where the trim is to be installed. If the area where the trim accessory is to be installed is not clean, dry, and free of any vinyl dressing, the trim accessory piece will not stick in place. Begin by cleaning the area thoroughly with a good non-residue cleaner such as Windex, or just clean thoroughly with soap and water and dry completely. **Note: Do not** use the 3M Tape Primer as a cleaner.

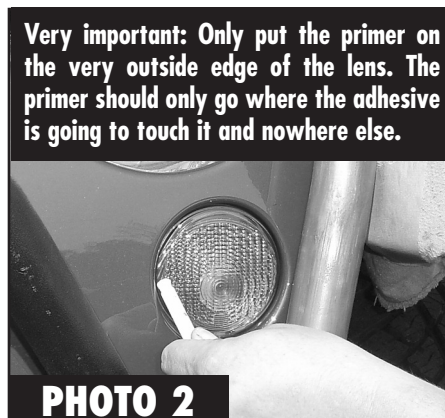


PHOTO 2

Prime only the plastic area where the Marker Light Surround is to be installed. Very important: Only put the primer on the very outside edge of the lens. The primer should only go where the adhesive is going to touch it and nowhere else. After the areas are completely cleaned and dry, you must then coat these plastic areas with 3M Tape Primer 94 (included). Thoroughly coat the cleaned area where the Marker Light Surround is to be installed with the Primer 94 and wait 5 minutes before installing the Marker Light Surround.

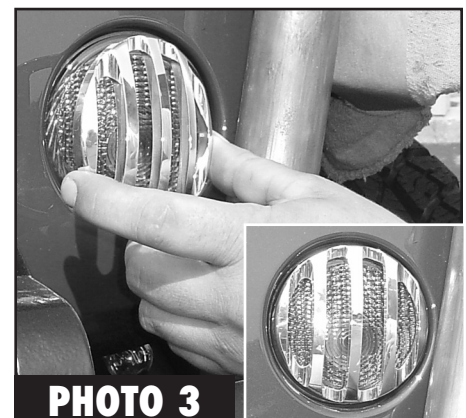


PHOTO 3

Position and Adhere the Surround. Before removing any heavy duty 3M Tape backing from the Marker Light Surround, loosely place it in position to verify how it will fit. Make sure the part lines up with any openings and fits side-to-side and top-to-bottom. Next peel off all the paper from the double-sided tape on the back of one of the Marker Light Surrounds. Carefully place the Marker Light Surround in position. **Important:** Make sure slats are in the vertical or horizontal position. Push and hold firmly for a few seconds. Repeat for the other Marker Lights and you're finished.

RealWheels Corporation • 3940 Tannahill Drive • Gurnee, IL 60031

847-662-7722 • Fax 847-662-7744 • www.realwheels.com • info@realwheels.com • toll-free 1-800-982-1180