


**IMPORTANT: Read And Understand All Instructions Before Installation • QUESTIONS? CALL 1-800-982-1180**


**STAINLESS STEEL TAIL LIGHT ARMOR**

**Time To Install: Approx. 15 Minutes**

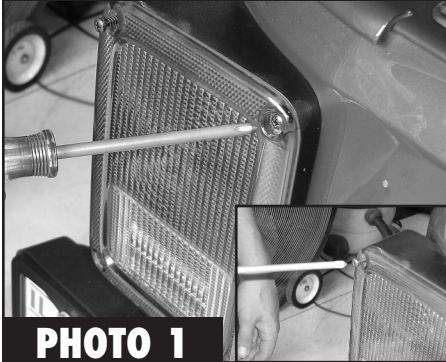

**PHOTO 1**

Begin by removing all four screws from the tail light. You will **not** use these screws for installation.

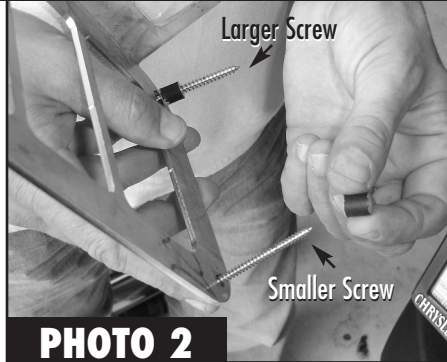

**PHOTO 2**

Using the new screws (provided), insert the larger screw (#8) through the outside bottom hole and the smaller screw (#6) through the inside bottom hole. Then place the spacers (provided) on each screw.




**PHOTO 3**

Place the Tail Light Armor in position and loosely tighten the two bottom screws.




**PHOTO 4**

Now using the new screws (provided), insert the larger screw (#8) through the outside top hole and through the spacer (provided). Insert the smaller screw (#6) through the inside top hole and through the spacer.

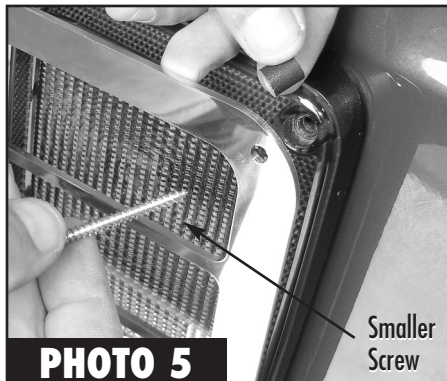


**PHOTO 5**

Now securely tighten all four screws. Repeat for the other side and you are finished.

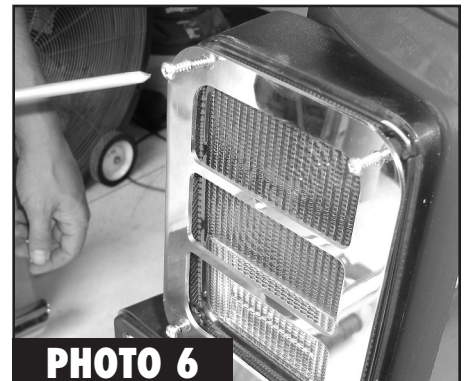

**PHOTO 6**

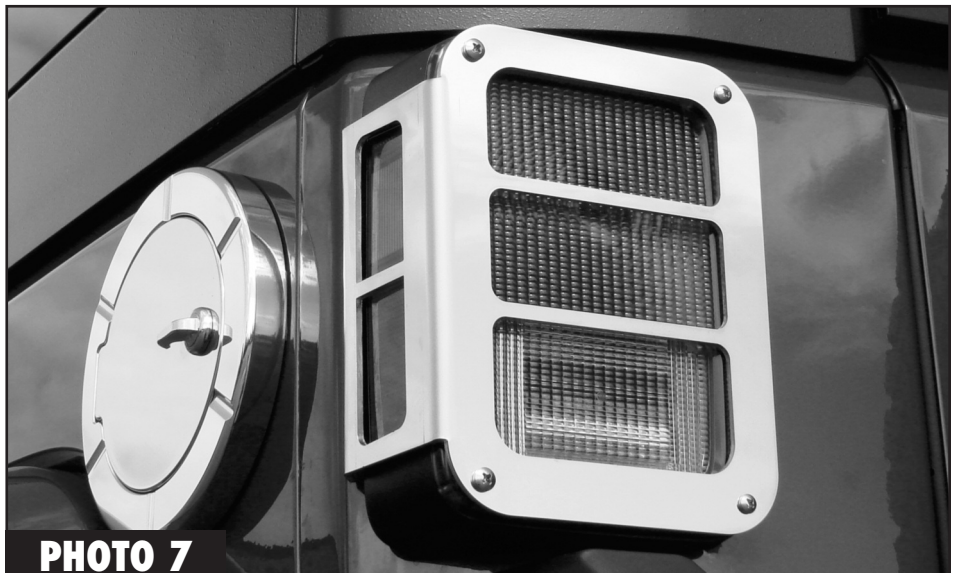

**PHOTO 7**

**RealWheels Corporation • 3940 Tannahill Drive • Gurnee, IL 60031**

**847-662-7722 • Fax 847-662-7744 • www.realwheels.com • info@realwheels.com • toll-free 1-800-982-1180**